


XPD-28

2:8 DMX & RDM Splitter

Firmware Update

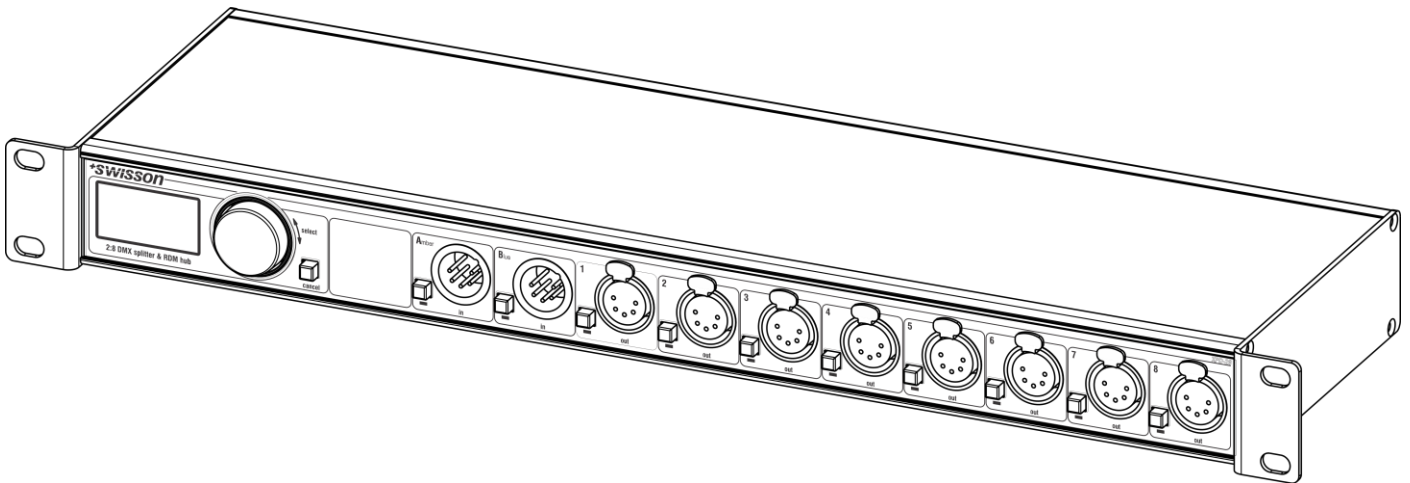

Index

Index.....	3
Requirements.....	4
Installing the Firmware Update Tool	4
Updating the Firmware	4
Recovering from a Failed Firmware Update	4

Requirements

- PC running Windows Vista or later.
- USB A to B cable (USB printer cable).
- Internet connection or pre-downloaded copy of the Swisson *Firmware Update Tool* installer.

Installing the Firmware Update Tool

After downloading the installer of the Swisson Firmware Update Tool from the product's web page on the Swisson website, execute the installer and follow the instructions. Make sure that both, the driver and the Firmware Update Tool are both selected when the installer asks you to select the components to install. The Firmware Update Tool on the product's web page contains the latest firmware for the XPD-28.

Updating the Firmware

Connect the XPD-28 to your computer using a USB A to B cable. Launch the Swisson *Firmware Update Tool*. Make sure, the XPD-28 is powered and has finished booting. If the drop-down box next to the "Discover Devices" button is empty, hit the "Discover Devices" button. Use the drop-down box next to the "Discover Devices" button to select your XPD-28. Then press the "Update Firmware" button and wait for the firmware update to complete.

Recovering from a Failed Firmware Update

In the unlikely case, that a firmware update goes wrong to the extreme that you end up with a device that has no working firmware installed, the device may be recovered from its bootloader. In order to prevent the bootloader from trying to start the defective firmware, simply keep [Cancel] pressed when powering up the XPD-28. Once the XPD-28 is powered, keep [Cancel] pressed for about a second. Then follow the usual firmware update procedure.