

=====
Version 1.02 2016-09-01
=====

* Improved firmware update reliability:
Firmware update does now have exclusive access to the flash memory until the new firmware has been transferred completely to the device.

=====
Version 1.01 2016-08-30
=====

* Improved firmware update reliability:
Some users of previous versions may have to use the bootloader for successfully completing a firmware update. In order to update the firmware from the bootloader, the device has to be repowered while the [Cancel] key is kept pressed, before starting the firmware update from a PC.

=====
Version 1.00 2016-08-25
=====

- * Improved splitting behaviour for RDM traffic.
- * Fixed an issue where the daughterboards were not reset correctly.
- * The screensaver can now be enabled or disabled.
- * Fixed an issue where RDM messages might corrupt the memory in rare cases.
- * Fixed an issue where the device might wrongly display the DMX lost status in rare cases.
- * Introduced new backup mode for redundant systems:
In the output port screen, the user may now select a backup mode.
This mode behaves as follows:
 - It prioritizes input A over B.
 - If input A fails and B is okay, all outputs configured as backup switch over to input B.
 - If input A becomes available while input B is active, the system switches back to input A.
 - If both inputs fail, the state changes to the failure behaviour defined for the input it is currently connected to.

=====
Version 0.91 2015-09-02
=====

* Turned compiler optimization on.

=====
Version 0.90 2015-07-08
=====

* First release.

=====
Version 0.10 2015-02-09
=====

* First beta release.